




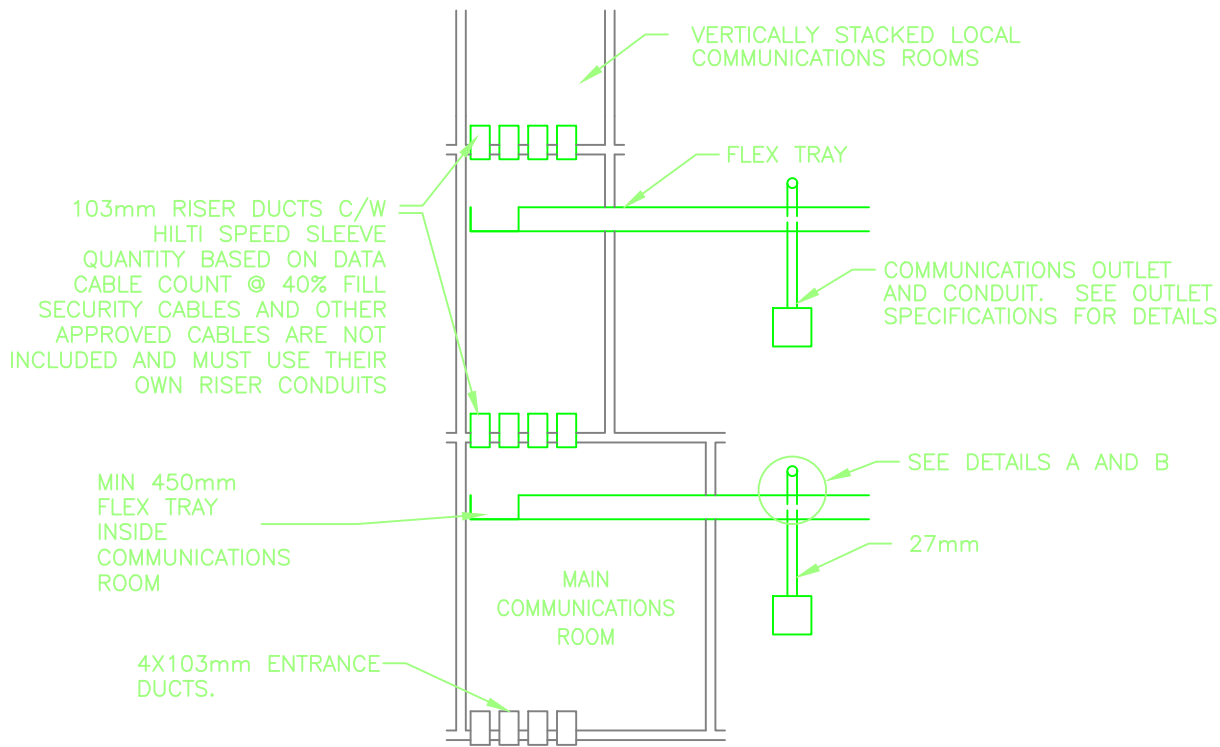

TYPICAL RISER DIAGRAM

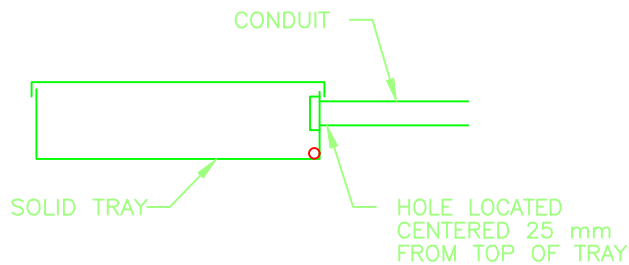

DETAIL A – CONDUIT TO SOLID TRAY

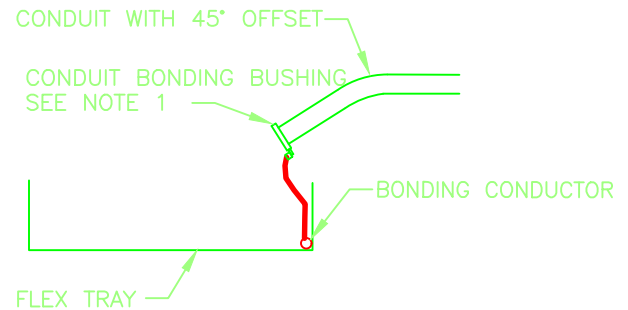

DETAIL B – CONDUIT TO FLEX TRAY

NOTES:

1. IF CONDUIT MOUNTING BRACKET IS NOT USED ON FLEX TRAY, USE BONDING BUSHING TO BOND CONDUIT WITH A #12 AWG WIRE TO THE TRAY BONDING CONDUCTOR.

Sheet No.

1 of 1

	BY	DATE
Drawn	DE	JULY 2025
Checked		
Design'd	TZ	JULY 2025
Approved	EB	JULY 2025

STACKED COMMUNICATIONS ROOM &
PATHWAY IN ACADEMIC BLDGS. (TYP.)



THE UNIVERSITY OF BRITISH COLUMBIA
Information Technology

File No.

ITSTD-18

Rev.

0